HACKETTSTOWN REGIONAL MEDICAL CENTER

Originator: Carol Wicki, RN, CNOR

Judy Young, RN

Reviewed by: O. Lopez, RN, BSN, CNOR

OR/CSR (Scope)

TITLE: STERIS: CHANGING PRE-FILTERS

PURPOSE: To outline the steps for changing the filters.

CONTENT: PROCEDURE STEPS:

1. Turn the water OFF.

2. Exhaust Air:

Press the red button located on the top of the pre-filter housing to exhaust air.

3. Remove Housing:

Unscrew counter-clockwise the housing body.

4. Remove Filter:

Rinse the housing bowl with clean water.

5. Install New Filter:

Filters are placed into the bowl with the **black** "O" ring facing up.

- Turning clockwise, screw the filter bowl into the housing.
- 7. Turn the water back on.

8. Exhaust Air:

Press the red button located on top of the housing.

Reference: Steris System 1 Operation Manual (1994)

Changing Pre-Filters

